


Ersatzteile

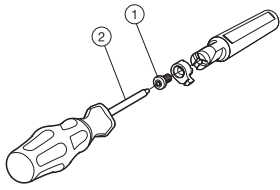

MB..Axx..R

	1	2	
CZC MS	Schraube	Schlüssel	
16	5513 039-02	5680 051-03	
20	5513 039-04	5680 043-14	

MB..Axx..R (ZOLL)


	1	2	
CZC MS	Schraube	Schlüssel	
5/8	5513 039-02	5680 051-03	
3/4	5513 039-04	5680 043-14	

MB..Exx-HP, MB..Exx..R

	1	2	
CZC MS	Schraube	Schlüssel	
12	5513 039-02	5680 051-03	
16	5513 039-04	5680 049-01	
20	5513 039-04	5680 043-14	

MB..Exx-HP (ZOLL), MB..Exx..R (ZOLL)

	1	2	
CZC MS	Schraube	Schlüssel	
1/2	5513 039-02	5680 051-03	
5/8	5513 039-04	5680 049-01	
3/4	5513 039-04	5680 043-14	

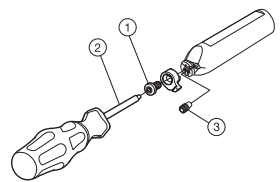

MB..Axx-HP

	1	2	3	
CZC MS	Schraube	Schlüssel	Düse	
16	5513 039-02	5680 049-01	5691 026-13	
20	5513 039-04	5680 043-14	5691 026-13	

MB..Axx-HP (ZOLL)

	1	2	3	
CZC MS	Schraube	Schlüssel	Düse	
3/4	5513 039-04	5680 043-14	5691 026-13	
5/8	5513 039-02	5680 049-01	5691 026-13	