

D

Fräsen

E

Bohren

F

Aufbohren


G

Werkzeugsysteme

J

Allgemeine Informationen

Ersatzteile für CoroMill® 210

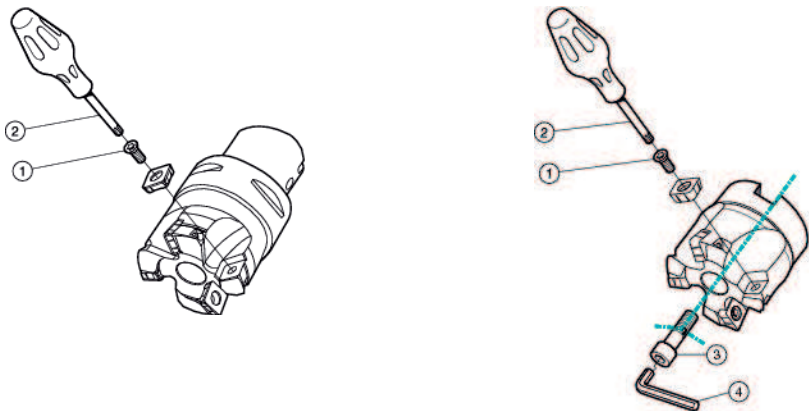

Fräser		1	2			3	4	
Größe	dm _m mm Zoll	Schraube für Wendeplatte	Schlüssel (Torx Plus)	Drehmoment- wert Nm (Zoll- lbs)	 Molykote	 Drehmoment- schlüssel ¹⁾	Schraube ²⁾	Schlüssel ¹⁾
09	–	5513 020-02	5680 046-02 (15IP)	3.0 (2.2)	5683 010-01	5680 100-06 (15IP)	–	–
14	–	5513 020-50	5680 046-06 (20IP)	5.0 (3.7)	5683 010-01	5680 100-07 (20IP)	–	–
R210	– 22	–	–	–	–	–	5512 073-01	3021 010-080 (8.0)
	– 27	–	–	–	–	–	5512 073-02	3021 010-100 (10.0)
	– 32	–	–	–	–	–	5512 073-05	3021 010-140 (14.0)
	– 125 - 160	–	–	–	–	–	5512 098-01	5680 043-18 (50IP)
RA210	– .750	–	–	–	–	–	5512 074-01	3021 011-516(5/16")
	– 1.000	–	–	–	–	–	5512 074-02	3021 011-380(3/8")
	– 1.500	–	–	–	–	–	5512 074-05	3021 011-580 (5/8")
	– 1.500 ³⁾	–	–	–	–	–	5512 099-01	5680 043-18 (50IP)

1) Zubehör ist gesondert zu bestellen
2) Optimierte Schraube: Flacher Kopf/Kleiner Durchmesser
3) Für Fräser mit 5 und 6 Zoll Durchmesser mit dm_m = 1,500 Zoll