


## Ersatzteile für CoroMill® Kugelschaftfräser

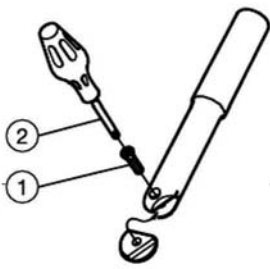

Fräser	1		2 <sup>1)</sup>		Drehmoment- schlüssel <sup>1)</sup>	Molykote
	Schraube für Wendeplatte	Schlüssel (Torx Plus)	Anzugs- moment Nm	In-lbs		
R216F-08...	5513 040-01	5680 046-03 (7IP)	0,9		5680 100-02	5683 010-01
R216F-10...	5513 040-02	5680 046-01 (8IP)	1,2		5680 100-03	5683 010-01
R216F-12...	5513 040-03	5680 046-05 (10IP)	2,0		5680 100-05	5683 010-01
R216F-16...	5513 040-04	5680 046-02 (15IP)	3,0		5680 100-06	5683 010-01
R216F-20...	5513 040-05	5680 048-03 (20IP)	5,0		5680 100-07	5683 010-01
R216F-25...	5513 040-06	5680 048-06 (25IP)	7,5		5680 100-08	5683 010-01
R216F-30/32...	5513 040-07	5680 048-08 (40IP)	26,0		-	5683 010-01
RA216F-08	5513 040-01	5680 046-03 (7IP)		7	5680 100-02	5683 010-01
RA216F-10	5513 040-02	5680 046-01 (8IP)		10	35680 100-03	5683 010-01
RA216F-13	5513 040-03	5680 046-05 (10IP)		18	5680 100-05	5683 010-01
RA216F-16	5513 040-04	5680 046-02 (15IP)		26	5680 100-06	5683 010-01
RA216F-19	5513 040-05	5680 048-03 (20IP)		44	5680 100-07	5683 010-01
RA216F-25	5513 040-06	5680 048-06 (25IP)		66	5680 100-08	5683 010-01
RA216F-30/32	5513 040-07	5680 048-08 (40IP)		230	-	5683 010-01

1) Zubehör ist gesondert zu bestellen

Fräsen

F

Bohren

F

Aufbohren

G

Werkzeugsysteme

J

Allgemeine Informationen



D312



D305



D334



D2